

CRIN2-16 Common Rail **0445120393** Fuel Injection PDF

SKU: G1S80445120393



INJECTOR

120 series

CRIN2-16 Common Rail 0445120393 Fuel Injection PDF

Content

1. 0445120393 Injector Introduction.....	2
1.1. 0445120393 Injector Basic Information	2
1.2. 0445120393 Injector Common Part Number	2
1.3. 0445120393 Injector Matching Information	2
1.4. 0445120393 Injector Parameter.....	5
1.5. 0445120393 Injector Specifications and Dimensions.....	6
1.6. 0445120393 Injector Customized Service	6
1.7. 0445120393 Injector Packing List and Package Size	7
1.8. 0445120393 Injector Quality Control.....	8
1.9. 0445120393 Injector Testing Standard and Certificate	8
1.10. 0445120393 Injector Warranty Instructions.....	9
1.11. 0445120393 Injector Manufacturer	10
2. 0445120393 Injector Technical Support.....	10
2.1. 0445120393 Injector Part Number Location	10
2.2. 0445120393 Injector Application Scenarios.....	10
2.3. 0445120393 Injector Installation.....	11
2.4. 0445120393 Injector Reasons for Not Working Normally.....	11
2.5. 0445120393 Injector Causes of Damage	12
2.6. 0445120393 Injector Technical Support Obtaining Methods.....	12
3. 0445120393 Injector Purchase and Delivery.....	13
3.1. 0445120393 Injector Purchase Payment Term.....	13
3.2. 0445120393 Injector Main Sales Markets	13
3.3. 0445120393 Injector Declaration Requirements.....	13
3.4. 0445120393 Injector Shipping Ways	13
3.5. 0445120393 Injector Lead time.....	13
3.6. 0445120393 Injector Logistics Time for Destination Out of China's Areas	13
3.7. 0445120393 Injector Packing	14
4. 0445120393 Injector Storage Standard	15
5. Company Information.....	16
5.1. Company Introduction.....	16
5.2. Contact Information	17
6. Copyright Policy	17

CRIN2-16 Common Rail **0445120393** Fuel Injection PDF

1. **0445120393** Injector Introduction

1.1. **0445120393** Injector Basic Information

Title	Common Rail CRIN2-16 Series 0445120393 Fuel Injection	Quality
SKU	G1S80445120393	China Made New

1.2. **0445120393** Injector Common Part Number

(1) Injector Exchange Information

Injector Part Number	Universal Part Number	Re-manufactured Part Number
0445120393	0445120078	0 986 AD1 014
	/	

(2) Injector Application Information

Injector Part Number	WUXI SIDA DIESEL ENGINE Car Number
0445120393	/
0445120078	1112010630
0 986 AD1 014	1112010630

(3) Injector Part Number Common Writing

0445120393, 0 445 120 393, 0445 120 393, 0445120 393, 0 445120393, 0 445120 393, 0445120078, 0 445 120 078, 0445 120 078, 0445120 078, 0 445120078, 0 445120 078, 0 986 AD1 014

1.3. **0445120393** Injector Matching Information

Vehicle Brand	Series	Car Model	Engine Model	Production Date	Power (KW)	Horse Power	Emission Standards	Manufacturer	Emissions (L)	Cylinder	Power Source (V)
MAN	26 t Bus [RR4]	26.480 HOCLN-SD	D 2676 LOH31	04/2013 -	353 kW	480 PS	Euro 6	MAN	12.4	6	24
MAN	Lion's Coach [R07, R08, R09]	Lion's Coach C,L	D 2676 LOH30	03/2013 -	324 kW	440 PS	Euro 6	MAN	12.4	6	24
MAN	Lion's Coach [R07, R08, R09]	Lion's Coach C,L	D 2676 LOH31	03/2013 -	353 kW	480 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 18 t	TGS 18.391	D 2676 LF47	03/2015 - 04/2018	294 kW	391 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 18 t	TGS 18.440	D 2676 LF26	10/2012 - 06/2016	324 kW	440 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 18 t	TGS 18.440	D 2676 LF46	03/2015 - 04/2018	324 kW	440 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 18 t	TGS 18.480	D 2676 LF25	10/2012 - 06/2016	353 kW	480 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 18 t	TGS 18.480	D 2676 LF45	03/2015 - 04/2018	353 kW	480 PS	Euro 6	MAN	12.4	6	24

MAN	TGS 24 t	TGS 24.391	D 2676 LF47	03/2015 - 04/2018	294 kW	391 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 24 t	TGS 24.440	D 2676 LF26	10/2012 - 06/2016	324 kW	440 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 24 t	TGS 24.440	D 2676 LF46	03/2015 - 04/2018	324 kW	440 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 24 t	TGS 24.480	D 2676 LF25	10/2012 - 06/2016	353 kW	480 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 24 t	TGS 24.480	D 2676 LF45	03/2015 - 04/2018	353 kW	480 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 26 t	TGS 26.391	D 2676 LF47	03/2015 - 04/2018	294 kW	391 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 26 t	TGS 26.440	D 2676 LF26	10/2012 - 06/2016	324 kW	440 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 26 t	TGS 26.440	D 2676 LF46	03/2015 - 04/2018	324 kW	440 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 26 t	TGS 26.480	D 2676 LF25	10/2012 - 06/2016	353 kW	480 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 26 t	TGS 26.480	D 2676 LF45	03/2015 - 04/2018	353 kW	480 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 28 t	TGS 28.391	D 2676 LF47	03/2015 - 04/2018	294 kW	391 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 28 t	TGS 28.440	D 2676 LF26	10/2012 - 06/2016	324 kW	440 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 28 t	TGS 28.440	D 2676 LF46	03/2015 - 04/2018	324 kW	440 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 28 t	TGS 28.480	D 2676 LF25	10/2012 - 06/2016	353 kW	480 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 28 t	TGS 28.480	D 2676 LF45	03/2015 - 04/2018	353 kW	480 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 32 t	TGS 32.391	D 2676 LF47	03/2015 - 04/2018	294 kW	391 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 32 t	TGS 32.440	D 2676 LF26	06/2013 - 06/2016	324 kW	440 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 32 t	TGS 32.440	D 2676 LF46	03/2015 - 04/2018	324 kW	440 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 32 t	TGS 32.480	D 2676 LF25	06/2013 - 06/2016	353 kW	480 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 32 t	TGS 32.480	D 2676 LF45	03/2015 - 04/2018	353 kW	480 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 33 t	TGS 33.391	D 2676 LF47	03/2015 - 04/2018	294 kW	391 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 33 t	TGS 33.440	D 2676 LF26	06/2013 - 06/2016	324 kW	440 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 33 t	TGS 33.440	D 2676 LF46	03/2015 - 04/2018	324 kW	440 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 33 t	TGS 33.480	D 2676 LF25	06/2013 - 06/2016	353 kW	480 PS	Euro 6	MAN	12.4	6	24

MAN	TGS 33 t	TGS 33.480	D 2676 LF45	03/2015 - 04/2018	353 kW	480 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 35 t	TGS 35.391	D 2676 LF47	03/2015 - 04/2018	294 kW	391 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 35 t	TGS 35.440	D 2676 LF26	06/2013 - 06/2016	324 kW	440 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 35 t	TGS 35.440	D 2676 LF46	03/2015 - 04/2018	324 kW	440 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 35 t	TGS 35.480	D 2676 LF25	06/2013 - 06/2016	353 kW	480 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 35 t	TGS 35.480	D 2676 LF45	03/2015 - 04/2018	353 kW	480 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 37 t	TGS 37.391	D 2676 LF47	03/2015 - 04/2018	294 kW	391 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 37 t	TGS 37.440	D 2676 LF26	06/2013 - 06/2016	324 kW	440 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 37 t	TGS 37.440	D 2676 LF46	03/2015 - 04/2018	324 kW	440 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 37 t	TGS 37.480	D 2676 LF25	06/2013 - 06/2016	353 kW	480 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 37 t	TGS 37.480	D 2676 LF45	03/2015 - 04/2018	353 kW	480 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 41 t	TGS 41.391	D 2676 LF47	03/2015 - 04/2018	294 kW	391 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 41 t	TGS 41.440	D 2676 LF26	06/2013 - 06/2016	324 kW	440 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 41 t	TGS 41.440	D 2676 LF46	03/2015 - 04/2018	324 kW	440 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 41 t	TGS 41.480	D 2676 LF25	06/2013 - 06/2016	353 kW	480 PS	Euro 6	MAN	12.4	6	24
MAN	TGS 41 t	TGS 41.480	D 2676 LF45	03/2015 - 04/2018	353 kW	480 PS	Euro 6	MAN	12.4	6	24
MAN	TGX 18 t	TGX 18.391	D 2676 LF47	03/2015 - 04/2018	294 kW	391 PS	Euro 6	MAN	12.4	6	24
MAN	TGX 18 t	TGX 18.440	D 2676 LF26	10/2012 - 06/2016	324 kW	440 PS	Euro 6	MAN	12.4	6	24
MAN	TGX 18 t	TGX 18.440	D 2676 LF46	03/2015 - 04/2018	324 kW	440 PS	Euro 6	MAN	12.4	6	24
MAN	TGX 18 t	TGX 18.480	D 2676 LF25	10/2012 - 06/2016	353 kW	480 PS	Euro 6	MAN	12.4	6	24
MAN	TGX 18 t	TGX 18.480	D 2676 LF45	03/2015 - 04/2018	353 kW	480 PS	Euro 6	MAN	12.4	6	24
MAN	TGX 24 t	TGX 24.391	D 2676 LF47	03/2015 - 04/2018	294 kW	391 PS	Euro 6	MAN	12.4	6	24
MAN	TGX 24 t	TGX 24.440	D 2676 LF26	10/2012 - 06/2016	324 kW	440 PS	Euro 6	MAN	12.4	6	24
MAN	TGX 24 t	TGX 24.440	D 2676 LF46	03/2015 - 04/2018	324 kW	440 PS	Euro 6	MAN	12.4	6	24

MAN	TGX 24 t	TGX 24.480	D 2676 LF25	10/2012 - 06/2016	353 kW	480 PS	Euro 6	MAN	12.4	6	24
MAN	TGX 24 t	TGX 24.480	D 2676 LF45	03/2015 - 04/2018	353 kW	480 PS	Euro 6	MAN	12.4	6	24
MAN	TGX 26 t	TGX 26.391	D 2676 LF47	03/2015 - 04/2018	294 kW	391 PS	Euro 6	MAN	12.4	6	24
MAN	TGX 26 t	TGX 26.440	D 2676 LF26	10/2012 - 06/2016	324 kW	440 PS	Euro 6	MAN	12.4	6	24
MAN	TGX 26 t	TGX 26.440	D 2676 LF46	03/2015 - 04/2018	324 kW	440 PS	Euro 6	MAN	12.4	6	24
MAN	TGX 26 t	TGX 26.480	D 2676 LF25	10/2012 - 06/2016	353 kW	480 PS	Euro 6	MAN	12.4	6	24
MAN	TGX 26 t	TGX 26.480	D 2676 LF45	03/2015 - 04/2018	353 kW	480 PS	Euro 6	MAN	12.4	6	24
MAN	TGX 28 t	TGX 26.480	D 2676 LF47	03/2015 - 04/2018	294 kW	391 PS	Euro 6	MAN	12.4	6	24
MAN	TGX 28 t	TGX 28.440	D 2676 LF26	10/2012 - 06/2016	324 kW	440 PS	Euro 6	MAN	12.4	6	24
MAN	TGX 28 t	TGX 28.440	D 2676 LF46	03/2015 - 04/2018	324 kW	440 PS	Euro 6	MAN	12.4	6	24
MAN	TGX 28 t	TGX 28.480	D 2676 LF25	10/2012 - 06/2016	353 kW	480 PS	Euro 6	MAN	12.4	6	24
MAN	TGX 28 t	TGX 28.480	D 2676 LF45	03/2015 - 04/2018	353 kW	480 PS	Euro 6	MAN	12.4	6	24
MAN	TGX 33 t	TGX 33.391	D 2676 LF47	03/2015 - 04/2018	294 kW	391 PS	Euro 6	MAN	12.4	6	24
MAN	TGX 33 t	TGX 33.440	D 2676 LF26	06/2013 - 06/2016	324 kW	440 PS	Euro 6	MAN	12.4	6	24
MAN	TGX 33 t	TGX 33.440	D 2676 LF46	03/2015 - 04/2018	324 kW	440 PS	Euro 6	MAN	12.4	6	24
MAN	TGX 33 t	TGX 33.480	D 2676 LF25	06/2013 - 06/2016	353 kW	480 PS	Euro 6	MAN	12.4	6	24
MAN	TGX 33 t	TGX 33.480	D 2676 LF45	03/2015 - 04/2018	353 kW	480 PS	Euro 6	MAN	12.4	6	24
MAN	TGX 35 t	TGX 35.391	D 2676 LF47	03/2015 - 04/2018	294 kW	391 PS	Euro 6	MAN	12.4	6	24
MAN	TGX 35 t	TGX 35.440	D 2676 LF26	12/2013 - 06/2016	324 kW	440 PS	Euro 6	MAN	12.4	6	24
MAN	TGX 35 t	TGX 35.440	D 2676 LF46	03/2015 - 04/2018	324 kW	440 PS	Euro 6	MAN	12.4	6	24
MAN	TGX 35 t	TGX 35.480	D 2676 LF25	12/2013 - 06/2016	353 kW	480 PS	Euro 6	MAN	12.4	6	24
MAN	TGX 35 t	TGX 35.480	D 2676 LF45	03/2015 - 04/2018	353 kW	480 PS	Euro 6	MAN	12.4	6	24

1.4. 0445120393 Injector Parameter

Adaptation System: **Common Rail System**

Injector Series: **120 Series**

Parameter Performance: **CRIN2-16**

Matching Accessories: Gasket F 00R J01 086 (7.73*14.36*1.49)

Injector Type: Electromagnetic Injector

Support System Maximum Pressure: 1,600

Vehicle Configuration Information: WUXI SIDA DIESEL ENGINE

1.5. 0445120393 Injector Specifications and Dimensions

Injector Size: 21.5cm*4 cm *4 cm = 344cm³ (L*W*H=V)

Injector Net Weight: 0.55kg

Gross Weight: 0.6kg

Injector Quality: China-Made New High Quality

Package Size: 28cm*7 cm *7 cm = 1372 cm³

Injector Type: Diesel Common Rail Injector

MOQ: 4 Pieces

1.6. 0445120393 Injector Customized Service

(1) Injector Customized Service: Shumatt support shell lettering, logo engraving, injector internal packaging, injector external packaging and labels, etc. Customized service, but the quantity of customized items must meet the demand of OEM manufacturers. The customized items' quantity requirement is as below,

(2) Injector Customized Service Requirements:

The purchased of customized injector are not less than 10 pieces.

Customized injector packages no less than 1000 pieces.

Customized products involve the need of specify logo, the OEM manufacturer needs to provide trademark authorization and the sample of logo image file.

 
⚠ Once the customized fuel injector is sold, it cannot be returned or exchanged if there is no quality problems.

(3) Customized Items List

	
Injector nozzle engraving	Injector house lettering and QR code
	
Injector solenoid valve engraving	Injector box and label

1.7. 0445120393 Injector Packing List and Package Size

(1) Injector Spare Parts List

No.	1	2	3
Image			
Name	Fuel Injector	O-Ring	Gasket F 00R J01 086
Description	Fuel injector part number: 0445120393	Ensure to meet the standard of the sealing performance between the injector and the engine	Made of brass, used to ensure the tight fit between the injector cap end and the engine
No.	4	5	6
Image			
Name	Nozzle Protective Cover Cap	Injector House Protective Cover Cap	Solenoid Valve Protective Cap
Description	Protect nozzle holes from being polluted and blocked	Protect oil inlet from being polluted and blocked	Protect the solenoid valve body and terminals from being damaged by external forces
No.	7	8	9
Image			
Name	VCI Anti-rust Bag	Bubble Bag	Injector Packing Box
Description	Prevent fuel injector from rusting	Prevent the injector from being damaged by external forces	Place injector and injector accessories

⚠ Minors are forbidden to use the fuel injector assembly, O-ring, gasket, nozzle protective cover, fuel injector house protective cover, solenoid valve protective cover, VCI anti-rust bag, and air bubble bag to avoid personal injury.

 
⚠ O-ring and gasket are disposable installation accessories, and need to be replaced for re-installation.

⚠ The nozzle protective cover, the injector house protective cover, and the solenoid valve protective cover are recyclable accessories that can be reused.

⚠ VCI anti-rust bags and bubble bags are non-degradable materials, please dispose of them properly after using.

⚠ The injector and the installation parts should be coated with appropriate sealing oil during

(2) Injector Box Size

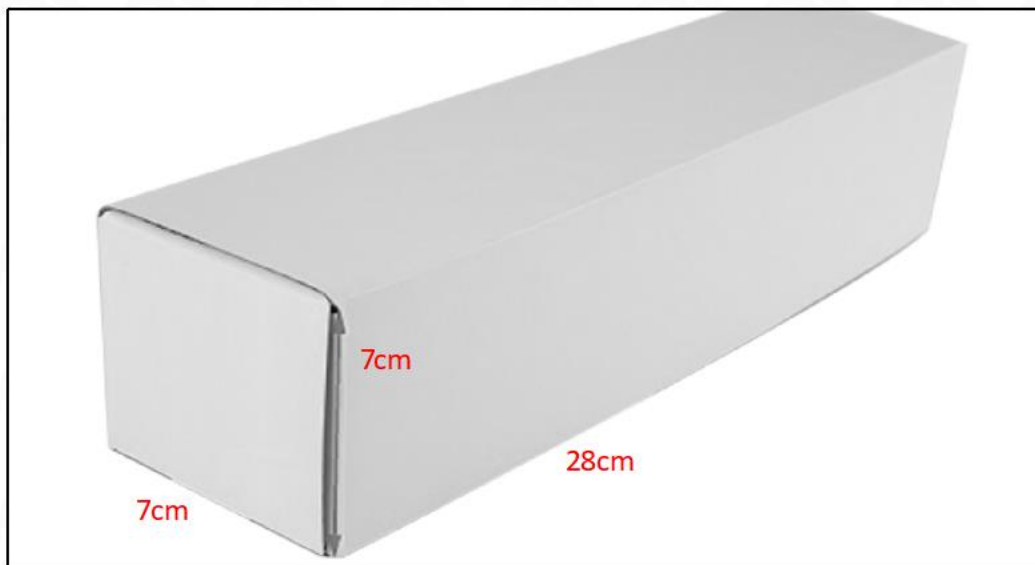

No.	Name	Injector Package Size (cm)
1	Injector Box	28*7*7

1.8. 0445120393 Injector Quality Control

(1) Injector Testing

All injector spare parts are tested for electrical characteristics, accuracy, high temperature, low temperature, withstand voltage, leakage, durability, and various working conditions.

(2) Injector Assembling

And the quality control of the injector production and installation process, our company strictly follows the standard product installation data and product installation steps to install, such as injector stroke test, injector solenoid valve tightening torque, injector nozzle tightening torque,

(3) Injector Inspection

The factory inspection of the injector is undergone full inspection, random inspection, and batch inspection three inspections. Different brands of test benches are used to test the same fuel injector for a total of no less than three times for factory inspection, and the fuel injector installation testing environment are progressed in dust-free workshop.

1.9. 0445120393 Injector Testing Standard and Certificate

We can provide the factory quality inspection test report of each injector to ensure that each injector delivered meets the engine performance indicators.

BOTEN		测试报告		4.05.2019 10:42:09	
企业名称: _____ 电话: _____ 地址: _____ 传真: _____ 检测人: _____ 客户地址: _____ 电话: _____ 检测单位: _____ 传真: _____ 客户姓名: _____ 检测描述: _____ 检测名称: 检测器 型号-零件号: _____ 检测商: _____					
检测结果					
仪器型号: C045002-6511 检测时间: 4.05.2019 10:42:09 检测地点: 检测器					
ISAR TEST:	3E	4	4.5	20.0 ± 1.0	✓
Back:	3E	4	75.0	20.0 ± 1.0	✓
WPRM:	3E	27.3 ± 1.0	0.0	20.0 ± 1.0	✓
Max:	291.5	218.5 ± 14.4	0.0	20.0 ± 1.0	✓
TL:	28.4	20.0 ± 0.5	0.0	20.0 ± 1.0	✓
LL:	14.1	15.0 ± 0.8	0.0	20.0 ± 1.0	✓
VE:	6.7	4.0 ± 1.0	0.0	20.0 ± 1.0	✓

1.10. 0445120393 Injector Warranty Instructions

(1) Product Warranty Conditions and Instructions

- 1) It is necessary to provide pictures, videos, or test reports detected by the injector inspection equipment when the injector is abnormal during use as evidence to feed back to the salesman.

Abnormal conditions are properly explained such as: 1.Smoke, 2. Engine shake, 3. Difficulty starting the engine, 4. Engine noise, 5. oil leakage etc.

(2) Injector Warranty Coverage

- 1) Within 15 days after customer receives the **0445120393** injector, if there is a performance failure and the product has no appearance damage, customer can choose to replace it or repair it;
- 2) If the **0445120393** injector has performance problems during the warranty period (3 months), and it is confirmed that it is product's problems after testing, you can contact our salesmen to replace the same model or a reworked product with the same performance for free;
- 3) If the injector house has obvious scratches, it can only be repaired and it will be returned as it is if the product is confirmed to be fault-free.

⚠ Tips: For products not covered by warranty, our company can provide paid maintenance services. For products after paid repaired, the same performance problem will have a free warranty period within 3 months from the date of repairing.

(3) Injector Out of Warranty Coverage

- 1) The warranty period has expired.
- 2) Injector failure caused by high temperature, high pressure, humidity, rain and snow, saline-alkali land, earthquake, and used in abnormal environment.
- 3) Customer disassembles or repairs the injector personally resulting in damage to the injector.
- 4) Injector damage caused by man-made reasons (throwing, strong magnetic field magnetization, set fire).
- 5) Injector failure or injector damage caused by non-injector design, technology, manufacturing, quality and other issues.
- 6) Injector failure due to system pressure exceeding system approved pressure.

- 7) Injector failure caused by system voltage exceeding approved voltage.
- 8) Injector failure caused by impurities (water, lead, aluminum powder, iron powder, sulfide) in the system fuel exceeding the standard requirements.
- 9) Injector failure caused by not installing according to the tightening torque specified in the vehicle engine maintenance manual (the tightening torque is too large or too small).
- 10) Injector failure caused by not following the installation angle specified in the vehicle engine maintenance manual.
- 11) Injector failure caused by not following the cleaning requirements specified in the vehicle engine maintenance manual.
- 12) Injector failure caused by failure to replace consumable parts as specified in the vehicle engine maintenance manual.
- 13) Injector failure caused by not complying with the intake system fit clearance and exhaust system fit clearance requirements specified in the vehicle engine maintenance manual.
- 14) Failure to replace the consumable parts and the fitting clearance of the oil inlet system pipeline and the fuel injector connection in accordance with the fuel intake system specified in the vehicle engine maintenance manual.

1.11. 0445120393 Injector Manufacturer

Injector manufacturer: Shenzhen Shumatt Technology Co., Ltd

2. 0445120393 Injector Technical Support

2.1. 0445120393 Injector Part Number Location


- 1) E.g.: The injector part number see as follows



No.	Name
A	brand, logo, part number, series number
B	nozzle part number

2.2. 0445120393 Injector Application Scenarios

 Common rail system is an oil supply method refers to the diesel oil from the fuel tank sucked out by the gear pump through the oil-water separator and the gear pump to diesel fine filter, high-pressure pump, common rail pipe, and fuel injector, all together with the closed-loop fuel supply system composed of sensors and ECU that completely separates the generation of injection pressure and the injection process from each other.

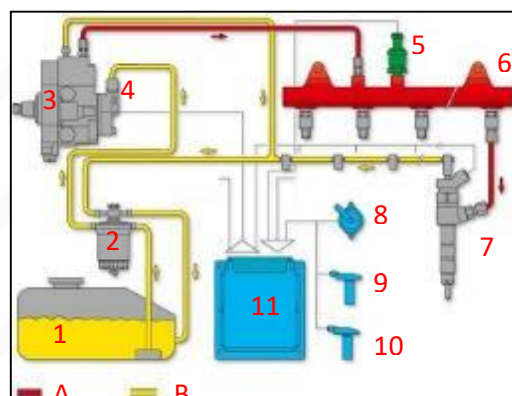

Pic No. 1

No.	Name	No.	Name	No.	Name	No.	Name
1	Tank	5	Common Rail Pressure Sensor	9	Engine Crankshaft Sensor	A	High Pressure Oil Circuit
2	Diesel Filter	6	Common Rail Pipe	10	Camshaft Sensor	B	Low Pressure Oil Circuit
3	High-Pressure Pump	7	Injector	11	ECU Electronic Control Unit		
4	Fuel Gear Pump	8	Accelerator Pedal				

2.3. 0445120393 Injector Installation

(1) 0445120393 Injector Installation Precautions:

- ⚠ The replacement of the fuel injector must strictly follow the electrical system, the approved pressure of the low-pressure fuel intake system, the approved pressure of the high-pressure fuel circuit system, and fuel system replacement consumables requirements (including the low-pressure fuel circuit system filter and the high-pressure fuel circuit) specified in the vehicle engine maintenance manual,
- ⚠ Replacement of wearing parts of the fuel system, cleaning requirements for the connection between the fuel system and the injector, the fitting clearance of the fuel injector connection, the installation angle and tightening torque of the injector, the fitting clearance of the intake system, and the fitting clearance of the exhaust system to ensure the service life of the engine and the normal operation of the injector.
- ⚠ When installing the fuel injector on the engine, it is necessary to clean the engine block, cylinder head and other parts connected to the fuel injector, and ensure that there is no dust, carbon deposits, water, rust spots, etc.
- ⚠ Before installing, check whether the fuel injector nozzle gasket has been replaced and installed on the fuel injector.
- ⚠ When installing the fuel injector, apply lubricant between the fuel injector, fuel nozzle sealing gasket and O-ring.
- ⚠ Without replacing new gasket can lead to: deformation of the tight cap of nozzle, deformation of nozzle, deformation of nozzle orifice, oil leakage and air leakage, which will cause serious damage to the fuel injector and nozzle to break and cause damage to the engine.
- ⚠ When installing the injector on the engine, please carefully check the components related to the installation of the injector, such as the injector pressure plate, screw, injector rod and other accessories are not deformed, and install it in strict accordance with the operation steps of the engine maintenance manual.
- ⚠ It is forbidden to operate the bare injector for a long time in an environment with serious dust pollution and corrosion to iron products.
- ⚠ It is forbidden to operate the bare injector for a long time in a strong magnetic field environment.

2.4. 0445120393 Injector Reasons for Not Working Normally

- (1) There is air in the oil circuit of the engine fuel system.
- (2) Vehicle oil pump oil supply system is not normal.
- (3) Engine common rail system oil leakage or pressure limiting valve damage.
- (4) There is a short circuit, cutting out and poor contact in the wiring harness connected to the fuel injector of the vehicle.
- (5) The long-term placement of the injector causes the anti-rust oil to solidify, and the internal components are stuck or the oil holes are blocked.

⚠ Before installing, carefully check whether other components in the common rail system except the fuel injector are damaged so as to prevent the fuel injector from not working properly after being replaced.

2.5. 0445120393 Injector Causes of Damage

- (1) Didn't operate properly according to engine maintenance manual during disassembly or installation, resulting in damage to the injector .
- (2) The fuel oil used for the vehicle does not meet the standard cause damage to the injector, such as: the water content in the fuel oil exceeds the standard, iron powder, aluminum powder, sulfide impurities exceed the standard, etc.
- (3) The engine is not regularly maintained according to the engine maintenance manual (please refer to the vehicle maintenance manual for the maintenance mileage). For example, failure to replace the lubricating oil of the engine system for a long time will cause abnormal wear of the engine, excessive exhaust gas volume or a large amount of carbon deposits inside the engine. The filter is not replaced during maintenance or the replaced filter cannot reach the original filter standard. all above reasons can cause damage to the injector.
- (4) The abrasion of the oil pump produces iron powder and aluminum powder enter the fuel injector and cause damage to the fuel injector.
- (5) The deformation and abrasion of fuel tank result in iron powder or aluminum powder entering the fuel injector and causing damage to the fuel injector.
- (6) The fuel injector is damaged due to replacement or adjustment of the relevant parts of the fuel injector. For example, the valve clearance does not meet the standard after the engine is repaired, the replacement or modification of the wiring harness connected to the injector fails to meet the original standard.
- (7) The engine is overheated and overloaded for a long time working results in damage to the fuel injector.
- (8) The injector will be damaged naturally at the end of its working life.
- (9) The injector is magnetized (injector parts' magnetic exceeded) causing the injector to not work properly.

⚠ Before replacing the fuel injector, please check the engine parts carefully according to the engine maintenance manual to avoid the fuel injector being damaged again after replacement.

2.6. 0445120393 Injector Technical Support Obtaining Methods

- (1) Injector Technical File, visit <http://shumatt.com> to get the technical file.

(2) Injector Technical Videos

Facebook: Visit <https://www.facebook.com/hison.li> to get the technical videos, constantly follow can get more information.

YouTube: https://www.youtube.com/channel/UCByvYBx7VjV_mAfxh_Hu-aw to get the technical videos, constantly follow can get more information.

Shumatt: Visit <http://shumatt.com> to get the technical videos.

(3) Injector Information Query Software

TruckBook Parts EPC APP, Android/Apple App Store download and install, visit <http://shumatt.com> to get the download and installation tutorial

(4) Search The fuel injector test data through TruckBook Parts EPC APP.

3. 0445120393 Injector Purchase and Delivery

3.1. 0445120393 Injector Purchase Payment Term

Payment Terms: T/T, PayPal, Alipay, WeChat

Please contact our salesmen for specific payment information.

3.2. 0445120393 Injector Main Sales Markets

Injector main sales markets: Asia, Europe, North America, South America, Africa etc.

3.3. 0445120393 Injector Declaration Requirements

Shumatt can assist customers to provide the following documents for import customs clearance: contract, invoice, packing list, bill of lading, insurance policy, certificate of origin, etc.

3.4. 0445120393 Injector Shipping Ways

Destination in China areas: SF Express, Debon Express, the corresponding logistics company can be provided according to customer requirements in special cases.

Destinations out of China's areas: DHL, UPS, FedEx, TNT air, ocean or other shipping methods required by customers.

3.5. 0445120393 Injector Lead time

Lead time: Send out within 3 – 7 working days after receiving payment (Except for special products and special cases).

3.6. 0445120393 Injector Logistics Time for Destination Out of China's Areas

DHL Logistics Time :

Country or Region of Departure	Hong Kong, China	Other Countries or Regions of Asia	Australia and New Zealand	Europe	America	Other Countries
China's Mainland	7 Days	7 Days	8 Days	8 Days	8-12 Days	7-10 Days

UPS Logistics Time: Country or Region of Departure: China's Mainland

Country of Destination	Estimated Arrival Time	Country of Destination	Estimated Arrival Time	Country of Destination	Estimated Arrival Time
Japan	3 Days	UK	5-7Days	Egypt	5-7 Days
Turkey	5-7 Days	Singapore	3 Days	Switzerland	5-7 Days
Bahrain	5-7 Days	Latvia	7-10 Days	New Zealand	7-10 Days
Sri Lanka	5-7 Days	Thailand	3 Days	Austria	5-7 Days
Romania	5-7 Days	Vietnam	3-5 Days	Estonia	5-7 Days
Malaysia	3-5 Days	Israel	5-7 Days	Mexico	7-10 Days
France	5-7 Days	America	5-7 Days	United Arab Emirates	5-7 Days
Italy	5-7 Days	Netherlands	5-7 Days	Bengal	7-10 Days
Lebanon	5-7 Days	Philippine	3-5 Days	Greece	7-10 Days

South Korea	3 Days	Spain	5-7 Days	Myanmar	5-7 Days
Canada	5-7 Days	Germany	5-7 Days	Saudi Arabia	7-10 Days
Portugal	5-7 Days	Australia	5-7 Days	South Africa	7-10 Days
Denmark	5-7 Days	Belgium	5-7 Days	Ukraine	7-10 Days
India	7-10 Days	Qatar	7-10 Days	Poland	5-7 Days
Indonesia	3-5 Days	Morocco	7-10 Days	Pakistan	7-10 Days
Kuwait	7-10 Days				

⚠ The logistics time is for reference only, subjects are according to the actual arrival.

 
3.7. 0445120393 Injector Packing

Domestic express packaging: Usually wrapped in waterproof scotch tape, such as picture No.2.



Pic No. 2

International express packaging: Wrapped with waterproof yellow tape After wrapping the black protective film, such as picture No. 3.

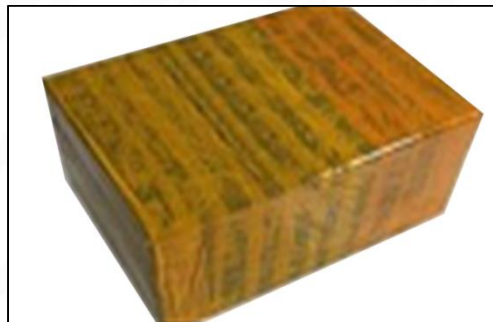

Pic No. 3

Pallet Shipping: Use fumigation free and recycling trays that meet export requirements, and use white wrapping protective film to wrap and bind with cable ties for the outside, such as picture No. 4, also, the products can be packaged according to customers' requirements.



Pic No. 4

- ⚠ The packing tray is made of plastic and can be recycled.
- ⚠ Transparent tape, yellow tape, black wrapping protective film, white wrapping protective film are non-degradable materials, please dispose of them properly.
- ⚠ Minors are prohibited from using transparent tape, yellow tape, black wrapping protective film, and white wrapping protective film to avoid personal injury.

4. 0445120393 Injector Storage Standard

(1) Choose a suitable storage place

- 1) The warehouse and cargo yard where the fuel injector is stored should be kept clean and dry, and away from the factory buildings that generate harmful gases and dust; do not mix with acid, alkali, salt and other substances; the storage place should have a good drainage system; the cargo yard should be flattened with gravel or furnace ash etc. to enhance the water permeability of the surface layer to keep the reservoir area dry.

(2) Strict requirements of warehousing

- 1) Strict inspections should be carried out when the fuel injectors are put into storage, the surface cleaning work should be done well to remove water traces, oil stains, ash and other dirt, remove the rust and do anti-rust treatment in time. Packaged injectors must be protected from damage.

(3) Keep the warehouse dry and preventing moisture

- 1) The relative humidity is usually below 70% for the fuel injectors placed in the room, and the corrosion of the fuel injectors is significantly reduced.
- 2) Injectors must be stored in the warehouse, and they are forbidden to store in the same warehouse with commodities with high water content.

(4) Stack Properly

- 1) After the injector is exposed to rain, the corrosion rate will increase significantly. The purpose of sealing is to isolate the injector from rainwater and humid air, so the warehouse window should be checked in

time to avoid rainwater entering the warehouse

- 2) If the fuel injector package is damaged, it should be repaired or replaced; when the package is damp, the packaging material should be dried; if the original anti-corrosion and oil applied at the factory is found to be damaged or dried up, it should be cleaned and re-applied oil in time.

⚠ It is forbidden to leave the injector exposed in the air for a long time.

⚠ It is forbidden to store acid, alkali, salt and other substances together with the injector.

⚠ The unpacked fuel injector must be rust-proof during secondary storage.

5. Company Information



5.1. Company Introduction

Chinese Name: 深圳市舒马特科技有限公司

English Name: Shenzhen Shumatt Technology Co., Ltd

☎ **Mob Phone/WeChat:** +86-13410541523

 **HK Telephone:** +852-67653519

 **Telephone:** +86-755-23215133

 **Email:** ruby@shumatt.com

 **Website:** www.shumatt.com

 **Shenzhen Office:** 11-12, Floor 14, Building 13, Qinchengda Building, Exit A, Honglang North Subway Station, Bao'an District, Shenzhen, China's Mainland

 **Shenzhen Office:** Exit C, Qiao Touxu Metro Station, NO. 66 Chongqing Road, Fuhai Avenue, Bao'an District, Shenzhen, China Mainland

 **Hong Kong Office:** Jianfa Street Industrial Zone, Tuen Mun, New Territories, Hong Kong, China

 **After-sales Service Address:** Please contact our salesmen to obtain and provide the corresponding product maintenance reasons (Reference: [1.10. 0445120393 Injector Warranty Instructions](#))

5.2. Contact Information

Name	WeChat/WhatsApp	Email
Hison Li	+86-13410541523	hison@shumatt.com
PS: www.truckfuelinjection.com's official email is end with @shumatt.com		

6. Copyright Policy

The copyright of the technical documents "CRIN2-16 Common Rail **0445120393 Fuel Injection PDF**" cited on this website (including but not limited to pictures, text, trademarks, Logos, videos, audios, fonts, designs, etc.) belongs to Shenzhen Shumatt Technology Co., Ltd. The distribution and dissemination of such content requires in accordance with the wishes of its copyright owner. This website (www.truckfuelinjection.com, hereinafter referred to as "this website") cannot provide anyone with any authorization related to such content.

All references on this website are subject to necessary review in accordance with the relevant laws and regulations of the People's Republic of China and the requirements of copyright owners. If due to ignorance or other reasons, there are errors in marking or improper use, please contact us through hison@shumatt.com, this website will correct it as soon as possible after we know it.